 


 
 


 

 

 

 

 



 

 
 
 
 
 
 
 
 

 
 


 
 



 

 

 
 

 



 
 
 


 



 

 

 

















 
 

 

 
 






 







 

 
 
 




Originale		Sostituto		Originale		Sostituto	
	On		Power		Vol-		Vol -
	Standby		Shift + Power		Return		Back
	Sleep		Sleep		Setup		Options
	< Input Selector		Shift + Left		Dimmer		9
	Input Selector >		Shift + Right		Muting		Mute
	SURR		3		I<<		I<<
	Stereo		1		Play		Play
	Direct		2		>>I		>>I
	A.ST		4		<<		<<
	Preset+		Ch +		Stop		Stop
	Preset-		Ch -		>>		>>
	Up		Up		Rec		Rec
	Left		Left		Pause / Play Rev.		Pause
	Enter		Ok		Open / Close		Eject
	Right		Right		Audio		Dual
	Down		Down		Display		Info
	Vol+		Vol +		SW Mode		Red







Originale	Sostituto
 ON	 Power
 STDBY	 Shift + Power
 Menu	 Menu
 Disc+	 Ch +
 Disc-	 Ch -
 Up	 Up
 Left	 Left
 Enter	 Ok
 Right	 Right
 Down	 Down
 Vol+	 Vol +
 Vol-	 Vol -
 Return	 Back
 Setup	 Options
 Muting	 Mute
 I<<	 I<<
 Play	 Play

Originale	Sostituto
 >>I	 >>I
 <<	 <<
 Stop	 Stop
 >>	 >>
 Pause	 Pause
 Open / Close	 Eject
 Random	 Text
 Subtitle	 Subt
 Angle	 Format
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8



