
 

 
 
 

 
 
 
 

 
 
 
 
 






Originale	Sostituto	Originale	Sostituto
 Power	 Power	 Up	 Up
 Mute	 Mute	 Left	 Left
 Play / Pause	 Play	 OK	 Ok
 USB / Stop	 Stop	 Right	 Right
 USB / Stop	 Media	 Down	 Down
 REC	 Rec	 Menu	 Menu
 Info	 Info	 Exit	 Exit
 Red / I<<	 Red	 Subtitle	 Subt
 Red / I<<	 I<<	 TXT	 Text
 Green / >>I	 >>I	 Recall	 Back
 Green / >>I	 Green	 Audio	 Dual
 Yellow / <<	 Yellow	 Page +	 Ch +
 Yellow / <<	 <<	 Page -	 Ch -
 Blue / >>	 Blue	 1	 1
 Blue / >>	 >>	 2	 2
 FAV	 Pre Ch	 3	 3
 SAT	 AV	 4	 4

Originale	Sostituto	Originale	Sostituto
 Up	 Up	 Left	 Left
 Left	 Left	 OK	 Ok
 Right	 Right	 Down	 Down
 Down	 Down	 Menu	 Menu
 Exit	 Exit	 Subtitle	 Subt
 TXT	 Text	 Recall	 Back
 Audio	 Dual	 Page +	 Ch +
 Page +	 Ch +	 Page -	 Ch -
 Page -	 Ch -	 1	 1
 1	 1	 2	 2
 2	 2	 3	 3
 3	 3	 4	 4





Originale		Sostituto	
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	EPG		Guide
	TV / Radio		TV/R

Originale		Sostituto	

