
 












 


 




 













Originale	Sostituto
 Power	 Power
 Mute	 Mute / Dimmer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 AV/Source	 AV / Input / RDS
 0	 0
 Exit	 Exit / Cancel / Clear
 -/--	 Shift + Guide / EPG / -/--
 CH+	 CH+ / Page+
 [i]/Info	 Info / Angle

Originale	Sostituto
 Vol+	 Vol+
 CH-	 CH- / Page-
 I-II	 Audio / Lang I/II
 Vol-	 Vol-
 Up	 Up
 Left	 Left
 OK/Select	 OK
 Right	 Right
 Menu	 Menu / Home
 Down	 Down
 TV/DTV	 TV/Radio /
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 [≡]/Text	 Text / Goto
 [≡o]	 Sleep / Timer





	Originale	Sostituto	Originale	Sostituto
	[≡+]/[X]	 << / Tune-		
	[≡x]/[⋯]	 >> / Tune+		
	[.]/[*]	 I<< / Preset-		
	[≡◆]/[+]/Wide	 Picture / Format		
	[≡?]	 >>I / Preset+		
	[≡i]/Guide	 Guide / EPG / -/--		
	P<P/SWAP	 Fav / Marker / PC		
	PP	 Back / Return		

