









 







 

 



 

 
 
 

 














 
 
 

 





| Originale | Sostituto |
|--|--|
|  Power |  Power |
|  Sleep |  Sleep / Timer |
|  Screen |  Picture / Format |
|  Presets |  Setup / OPT / |
|  ↔ |  TV/Radio / |
|  FAV |  Shift + Fav / Marker / PC |
|  Lang |  Audio / Lang I/II |
|  Subtitle |  Subtitle / EQ |
|  TXT |  Text / Goto |
|  1 |  1 |
|  2 |  2 |
|  3 |  3 |
|  4 |  4 |
|  5 |  5 |
|  6 |  6 |
|  7 |  7 |
|  8 |  8 |

| Originale | Sostituto |
|---|---|
|  9 |  9 |
|  EPG |  Guide / EPG / -/- |
|  0 |  0 |
|  Swap |  Fav / Marker / PC |
|  |  D.Menu / Top |
|  |  Smart / List |
|  Source |  AV / Input / RDS |
|  Menu |  Menu / Home |
|  |  |
|  |  |
|  OK |  OK |
|  |  |
|  |  |
|  C |  Exit / Cancel / Clear |
|  Disp. |  Display / Media |
|  Search Mode |  Shift + Red / Netflix / |
|  Return |  Back / Return |





| Originale | | Sostituto | | Originale | | Sostituto | |
|-----------|----------------|-----------|------------------------|-----------|-------------|-----------|-----------------------------|
| | CH+ | | CH+ / Page+ | | Yellow/Root | | Yellow / YouTube / Repeat |
| | Info | | Info / Angle | | Blue/Title | | Blue / Prime Video / Random |
| | Vol+ | | Vol+ | | | | |
| | CH- | | CH- / Page- | | | | |
| | Mute | | Mute / Dimmer | | | | |
| | Vol- | | Vol- | | | | |
| | Rec | | Rec / Rec Mode | | | | |
| | Pause | | Pause / Step / Freeze | | | | |
| | I<< | | I<< / Preset- | | | | |
| | >>I | | >>I / Preset+ | | | | |
| | << | | << / Tune- | | | | |
| | Play | | Play / Slow | | | | |
| | Stop | | Stop / Hold | | | | |
| | >> | | >> / Tune+ | | | | |
| | Red/↑/Zoom | | Red / Netflix / Search | | | | |
| | Red/↑/Zoom | | Zoom / Size | | | | |
| | Green/↓/Repeat | | Green / APP / Repeat | | | | |

