

 
 


 
 

 


 
 




 






 



















 


 

 


 


 
 


 
 
 







Originale	Sostituto	Originale	Sostituto
 Power	 Power	 Up	 Up
 i	 DISPLAY INFO	 Down	 Down
 AUDIO I/II	 SOUND DUAL	 Right	 Right
 [...]	 AD SUBT	 Left	 Left
 1	 1	 ENTER/CH LIST	 OK
 2	 2	 MUTE	 MUTE
 3	 3	 PICTURE SIZE	 ECO 3D
 4	 4	 +	 + VOL
 5	 5	 -	 VOL -
 6	 6	 + P	 + CH
 7	 7	 P -	 CH -
 8	 8	 FREEZE/[+]	 HOME SMART
 9	 9	 RETURN	 CLEAR EXIT
 0	 0	 P<->P/[≡o]/[≡*]	 FAV PRE-CH
 INPUT SELECT	 TIMER AV	 TV	 SEARCH TV/R
 GUIDE (EPG)	 GUIDE	 MEDIA	 APP MEDIA
 MENU	 TOP MENU MENU	 PLAY MODE REC LIST	 PICTURE FORMAT





Originale		Sostituto		Originale		Sostituto	
	T-Rec		Options				
	[≡]		Text				
	[≡?]		List				
	[≡◆]		Sleep				
	Red		Red				
	Green		Green				
	Yellow		Yellow				
	Blue		Blue				
	<<		<<				
	Play		Play				
	>>		>>				
	Rec		Rec				
	I<<		I<<				
	Pause		Pause				
	Stop		Stop				
	>>I		>>I				

