























 













Originale	Sostituto
 Mute	 Mute / Dimmer
 Power	 Power
 PP	 Back / Return
 I-II	 Audio / Lang I/II
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 --	 Guide / EPG / --
 P<P	 Fav / Marker / PC
 Menu	 Menu / Home

Originale	Sostituto
 Info	 Info / Angle
 Left	 Left
 Up	 Up
 P+	 CH+ / Page+
 Right	 Right
 Down	 Down
 P-	 CH- / Page-
 Vol-	 Vol-
 Vol+	 Vol+
 Red/Sound	 Red / Netflix / Search
 Red/Sound	 Sound / Title
 Green/Picture	 Green / APP / Repeat
 Green/Picture	 Picture / Format
 Yellow/Feature	 Yellow / YouTube / Repeat
 Blue/Install	 Blue / Prime Video / Random
 TV	 TV/Radio /
 AV	 AV / Input / RDS





Originale		Sostituto		Originale	Sostituto
[≡]	[≡]	GOTO TEXT	Text / Goto		
[ /≡]	[ /≡]	SHIFT + GOTO TEXT	Shift + Text /		
[≡o]	[≡o]	TIMER SLEEP	Sleep / Timer		
[≡+]	[≡+]	HOLD	Stop / Hold		
[≡x]	[≡x]	OPT-TOOLS SETUP	Setup / OPT /		
[≡◆]	[≡◆]	SIZE ZOOM	Zoom / Size		
[≡?]	[≡?]	LIST SMART	Smart / List		
[≡i]	[≡i]	MEDIA DISPLAY	Display / Media		

