



 




Originale		Sostituto		Originale		Sostituto	
	Power		Power		Info		Info / Angle
	Setup		Setup / OPT /		Menu		Menu / Home
	Tv Out		TV/Radio /		Up		Up
	Func		D.Menu / Top		Left		Left
	Mute		Mute / Dimmer		Enter		OK
	1		1		Right		Right
	2		2		Down		Down
	3		3		Play List		Smart / List
	4		4		Bookmark		Green / APP / Repeat
	5		5		Stop		Stop / Hold
	6		6		Pause		Pause / Step / Freeze
	7		7		Play		Play / Slow
	8		8		Vol+		Vol+
	9		9		<<		<< / Tune-
	0		0		>>		>> / Tune+
	Goto		Text / Goto		Vol-		Vol-
	Title		Sound / Title		I<<		I<< / Preset-





	Originale	Sostituto	Originale	Sostituto
	>>	>>  / Preset+		
	Media	Display / Media		
	Rotation	Picture / Format		
	F1	+  Shift + 1		
	Random	Blue / Prime Video / Random		
	Audio	Audio / Lang I/II		
	Sub-T	Subtitle / EQ		
	Zoom	Zoom / Size		
	Repeat	Exit / Cancel / Clear		
	A-B	Yellow / YouTube / Repeat		
	Return	Back / Return		
	Pg Up	CH+ / Page+		
	Pg Dn	CH- / Page-		

