













 






Originale	Sostituto
 Standby	 Power
 Mute	 Mute
 Up	 Up
 Left	 Left
 OK	 Ok
 Right	 Right
 Down	 Down
 Menu	 Menu
 Exit	 Exit
 Red / UHF	 Red
 Green / Audio	 Green
 Green / Audio	 Dual
 Yellow / Pause	 Yellow
 Yellow / Pause	 Pause
 Blue / Recall	 Blue
 Blue / Recall	 Back
 1	 1

Originale	Sostituto
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 EPG	 Guide
 Group	 Pre Ch
 Vol+	 Vol +
 Vol-	 Vol -
 CH+	 Ch +
 CH-	 Ch -
 Page+	 >>
 Page-	  <<





Originale	Sostituto
 Info	 Info
 SAT/TV	 AV
 SAT/TV	 Media

Originale	Sostituto

