



	Originale	Sostituto	
	Program	 TV/Radio /	
	-10	 Guide / EPG / -/--	
	+10	 Fav / Marker / PC	
	Play	 Play / Slow	
	Pause	 Pause / Step / Freeze	
	<<	 << / Tune-	
	I<<	 I<< / Preset-	
	>>	 >> / Tune+	
	>>I	 >>I / Preset+	
	Stop	 Stop / Hold	
	Repeat	 Green / APP / Repeat	
	Vol-	 Vol-	
	Vol+	 Vol+	

Originale	Sostituto

