





Originale	Sostituto
	 Power
	 Stop / Hold
	 Pause / Step / Freeze
	 Rec / Rec Mode
	 << / Tune-
	 Play / Slow
	 >> / Tune+
	 Guide / EPG / -/-
	 Eject / Surround
	 Display / Media
	 AV / Input / RDS
	 TV/Radio /
	 Picture / Format
	 Menu / Home
	 Smart / List
	 Shift + Smart / List
	 Info / Angle

Originale	Sostituto
	 Up
	 Left
	 OK
	 Right
	 Exit / Cancel / Clear
	 Down
	 Setup / OPT /
	 Back / Return
	 CH- / Page-
	 CH+ / Page+
	 Vol-
	 Mute / Dimmer
	 Vol+
	 Red / Netflix / Search
	 Green / APP / Repeat
	 Yellow / YouTube / Repeat
	 Blue / Prime Video / Random





Originale		Sostituto		Originale		Sostituto	
1. #	1	TV 1	1				
2 ABC	2	DVD 2	2				
DEF 3	3	CD - STB 3	3				
4 GHI	4	VIDEO 4	4				
5 JKL	5	TAPE 5	5				
MNO 6	6	TUNER 6	6				
7 PQRS	7	AUX - HDD 7	7				
8 TUV	8	USB 8	8				
WXYZ 9	9	BLUETOOTH 9	9				
SUBTITLE	Subtitle	EQ SUBTITLE	Subtitle / EQ				
0 -	0	HDMI - SAT 0	0				
TEXT	[≡]/Text	GOTO TEXT	Text / Goto				

