

 

 








 



 


Originale	Sostituto
 Standby	 Power
 Monitor	 Media
 Tv/DVD	 TV/R
 T/C	 Subt
 Play Mode	 Shift + Play
 Rec Mode	 Shift + Rec
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Disc	 Menu

Originale	Sostituto
 System	 Smart
 Select	 Info
 Timer	 AV
 Tv Vol+	 Vol +
 OK	 Ok
 Tv Vol-	 Vol -
 CH+	 Ch +
 CH-	 Ch -
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 Scissors/FSS	 Options
 Return	 Back
 Clear	 Exit
 Play	 Play
 I<<	 I<<





Originale	Sostituto	Originale	Sostituto
 Stop	 Stop		
 >>I	 >>I		
AUDIO  Audio	SOUND  DUAL Dual		
REC/OTR  Rec/OTR	REC MODE  Rec		
PAUSE  Pause	 Pause		

Originale	Sostituto

