
 


 

 






 



 

 

 







 














 
 

 



Originale	Sostituto
 Power	 Power
 Rec	 Rec / Rec Mode
 Red	 Red / Netflix / Search
 I<<	 I<< / Preset-
 Green/[]	 Green / APP / Repeat
 Stop	 Stop / Hold
 Yellow	 Yellow / YouTube / Repeat
 Play/[≡]	 Play / Slow
 Blue/[■]	 Blue / Prime Video / Random
 >>I	 >>I / Preset+
 AV/[?]	 AV / Input / RDS
 I-II/[≡≡]	 Audio / Lang I/II
 [<>]/[+]	 Picture / Format
 [-S-]	 Zoom / Size
 Menu	 Menu / Home
 [≡]	 Text / Goto
 Pause	 Pause / Step / Freeze

Originale	Sostituto
 Left	 Left
 Up	 Up
 Right	 Right
 OK	 OK
 Down	 Down
 Vol+	 Vol+
 Mute	 Mute / Dimmer
 P+	 CH+ / Page+
 Vol-	 Vol-
 Smart ♪	 Sound / Title
 P-	 CH- / Page-
 Smart []	 Smart / List
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5










	Originale	Sostituto	Originale	Sostituto
	6	 6		
	7	 7		
	8	 8		
	9	 9		
	[i+]	 INFO Info / Angle		
	0	 0		
	P<P	 FAV MARKER Fav / Marker / PC		





Originale	Sostituto	Originale	Sostituto
0	 Eject / Surround	 [≡]	 Text / Goto
-0-	 Subtitle / EQ	 Left	 Left
Power	 Power	 Up	 Up
Rec	 Rec / Rec Mode	 Right	 Right
I<<	 I<< / Preset-	 OK	 OK
Red	 Red / Netflix / Search	 Down	 Down
Green/[[]]	 Green / APP / Repeat	 Vol+	 Vol+
Stop	 Stop / Hold	 Mute	 Mute / Dimmer
Play	 Play / Slow	 P+	 CH+ / Page+
Yellow / List	 Yellow / YouTube / Repeat	 Vol-	 Vol-
>>I	 >>I / Preset+	 Smart J	 Sound / Title
AV/[?]	 AV / Input / RDS	 P-	 CH- / Page-
I-II/[≡≡]	 Audio / Lang I/II	 Smart []	 Smart / List
[<>]/[+]	 Zoom / Size	 1	 1
PIP [■]	 Picture / Format	 2	 2
Menu	 Menu / Home	 3	 3
Pause	 Pause / Step / Freeze	 4	 4





 

 

 









 

 

 


 
 
	Originale	Sostituto		Sostituto
	5		5	
	6		6	
	7		7	
	8		8	
	9		9	
	[i+]		Info / Angle	
	0		0	
	P<P		Fav / Marker / PC	

	Originale	Sostituto





Originale	Sostituto	Originale	Sostituto
	Power		Power
	-O-		Subtitle / EQ
	I<<		I<< / Preset-
	>>I		>>I / Preset+
	AV/[?]		AV / Input / RDS
	I-II/[≡ ≡]		Audio / Lang I/II
	[<>]/[+]		Zoom / Size
	Pause		Pause / Step / Freeze
	[≡]		Text / Goto
	Left		Left
	Up		Up
	Right		Right
	OK		OK
	Down		Down
	Vol+		Vol+
	Mute		Mute / Dimmer
	P+		CH+ / Page+

Originale	Sostituto	Originale	Sostituto
	Vol-		Vol-
	Smart J		Sound / Title
	P-		CH- / Page-
	Smart []		Smart / List
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	P<P		Fav / Marker / PC

