

















 





 

 

 







 



Originale	Sostituto
 Power	 Power
 VGA	 Red / Netflix / Search
 AV1	 Shift + 1
 AV2	 Shift + 2
 AV3	 Shift + 3
 Brightness+	 >> / Tune+
 Brightness-	 << / Tune-
 Contrast+	 >>I / Preset+
 Contrast-	 I<< / Preset-
 Zoom On/Off	 Zoom / Size
 Zoom In	 Sleep / Timer
 Zoom Out	 TV/Radio /
 Menu	 Menu / Home
 OK	 OK
 Up	 Up
 Down	 Down
 Left	 Left

Originale	Sostituto
 Right	 Right
 Vol+	 Vol+
 Vol-	 Vol-
 Mute	 Mute / Dimmer
 CH/PR+	 CH+ / Page+
 CH/PR-	 CH- / Page-
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 AV Mute	 AV / Input / RDS





Originale		Sostituto		Originale		Sostituto	
	[<>]		Picture / Format				

