


Originale	Sostituto
TV/Sat	Display / Media
Power	Power
1 / Card	1
2 / Lock	2
3 / Skip	3
3 / Skip	>>I / Preset+
4 / Sleep	4
4 / Sleep	Sleep / Timer
5 / UHF	5
6 / Install	6
7 / Access	7
8	8
9	9
0 / AV	AV / Input / RDS
0 / AV	0
Up / RCL	Up
F	Smart / List

Originale	Sostituto
Left	Left
Menu / Expand	OK
Menu / Expand	Zoom / Size
Menu / Expand	Menu / Home
Right	Right
i / Reveal	Info / Angle
Down / Fav /	Fav / Marker / PC
Down / Fav /	Down
Radio / Hold	TV/Radio /
Radio / Hold	Stop / Hold
Store / Text/Mix	Text / Goto
Norm / Picture	Picture / Format
Mute	Mute / Dimmer
Fastext Red	Red / Netflix / Search
Fastext Yellow	Yellow / YouTube / Repeat
Volume+	Vol+
Fastext Green	Green / APP / Repeat

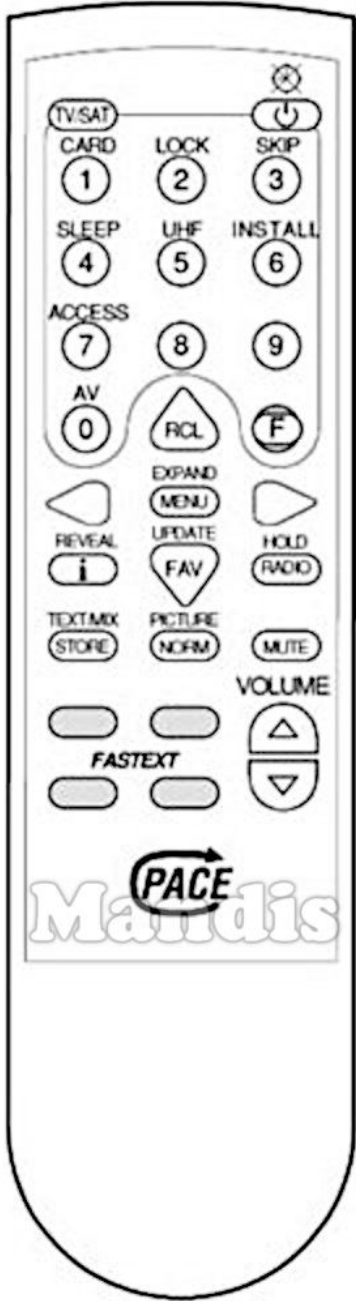



Originale	Sostituto	Originale	Sostituto
Fasttext Blue	Blue / Prime Video / Random		
Volume-	Vol-		

