



Originale	Sostituto	Originale	Sostituto
 1	 1	 Exit	 Exit / Cancel / Clear
 2	 2	 Menu	 Menu / Home
 3	 3	 EPG	 Guide / EPG / -/-
 Power	 Power	 Audio	 Audio / Lang I/II
 4	 4	 ALT	 Smart / List
 5	 5	 Page+	 CH+ / Page+
 6	 6	 SUB	 Subtitle / EQ
 TV/Rad	 TV/Radio /	 Up / CH+	 Shift + CH+ /
 7	 7	 Up / CH+	 Up
 8	 8	 Left / Vol-	 Vol-
 9	 9	 Left / Vol-	 Left
 TV	 Shift + 1	 OK	 OK
 TV	 AV / Input / RDS	 Right / Vol+	 Vol+
 0	 0	 Right / Vol+	 Right
 Text	 Text / Goto	 Browse	 Display / Media
 i	 Info / Angle	 Down / CH-	 Down
 Mute	 Mute / Dimmer	 Down / CH-	 Shift + CH- / Page-

Originale	Sostituto	Originale	Sostituto
 Exit	 Exit / Cancel / Clear	 Menu	 Menu / Home
 EPG	 Guide / EPG / -/-	 Audio	 Audio / Lang I/II
 ALT	 Smart / List	 Page+	 CH+ / Page+
 SUB	 Subtitle / EQ	 Up / CH+	 Shift + CH+ /
 Up / CH+	 Up	 Left / Vol-	 Vol-
 Left / Vol-	 Left	 OK	 OK
 Right / Vol+	 Vol+	 Right / Vol+	 Right
 Browse	 Display / Media	 Down / CH-	 Down
 Down / CH-	 Shift + CH- / Page-		





Originale		Sostituto		Originale		Sostituto	
	Freeze		Pause / Step / Freeze				
	Page-		CH- / Page-				
	Red		Red / Netflix / Search				
	Green		Green / APP / Repeat				
	Yellow		Yellow / YouTube / Repeat				
	Blue		Blue / Prime Video / Random				

