



Originale	Sostituto
Power	Power
Power Tv	Shift + Power
Vol+ Tv	Shift + Vol+
DVD	Shift + 2
TV/AV Tv	TV/Radio /
Vol- Tv	Shift + Vol-
Tuner/Band	Shift + 6
1	1
2	2
3	3
Ext-In	Shift + Back / Return
4	4
5	5
6	6
One Touch Play	Smart / List
7	7
8	8

Originale	Sostituto
9	9
Vol+	Vol+
Cancel	Exit / Cancel / Clear
0	0
+10/-10	Shift + 0
Vol-	Vol-
I<</Skip Down	I<< / Preset-
Skip Up/>>I	>>I / Preset+
<< Slow/Search	<< / Tune-
Slow/Search >>	>> / Tune+
Stop	Stop / Hold
Pause	Pause / Step / Freeze
Play	Play / Slow
Top Menu/Direct Navigator	D.Menu / Top
Up	Up
Menu/Play List	Menu / Home
Left	Left





Originale	Sostituto
Enter	OK
Right	Right
Functions	Setup / OPT /
Down	Down
Return/-Setup	Back / Return
Subwoofer	Audio / Lang I/II
-SFC/-SRD ENH	Zoom / Size
-H.BASS/-C.Focus	Sound / Title
Dolby/PLII	Shift + Audio / Lang I/II
FL Display/-Sleep	Display / Media
CH Select/-Test	Shift + Smart / List
Play Mode	Shift + Play /
Muting	Mute / Dimmer

Originale	Sostituto

