

 





 

 

 

 

 

 













 





Originale	Sostituto
 Power	 Power
 SD Card	 Display / Media
 Input TV	 TV/Radio /
 Input AV	 AV / Input / RDS
 Menu	 Menu / Home
 [+]/Aspect	 Picture / Format
 N	 Sound / Title
 Direct Rec TV	 Shift + Rec / Rec Mode
 i	 Info / Angle
 Exit	 Exit / Cancel / Clear
 Viera Tools	 D.Menu / Top
 Viera Link	 Smart / List
 Up	 Up
 Guide	 Guide / EPG / -/--
 Left	 Left
 OK	 OK
 Right	 Right

Originale	Sostituto
 Option	 Setup / OPT /
 Down	 Down
 Return	 Back / Return
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 Text	 Text / Goto
 [=◆]/STTL	 Subtitle / EQ
 [=i]/Index	 Eject / Surround
 [=+]/Hold	 Shift + Stop /
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6





	Originale	Sostituto
	7	7
	8	8
	9	9
	Mute	Mute / Dimmer
	0	0
	Recall/Last View	Fav / Marker / PC
	Vol+	Vol+
	PR+	CH+ / Page+
	Vol-	Vol-
	PR-	CH- / Page-
	Power Down	Shift + Power
	PR- Down	Shift + CH- /
	PR+ Down	Shift + CH+ /
	<</I<<	<< / Tune-
	Play	Play / Slow
	>>/>>I	>> / Tune+
	Stop	Stop / Hold

	Originale	Sostituto
	II>/Step	Pause / Step / Freeze
	Rec	Rec / Rec Mode

