 

 

 

 
 
 



 

 














Originale	Sostituto
 Power	 Power
 Off Timer	 Sleep / Timer
 Input Tv	 Shift + AV / Input / RDS
 Input AV	 AV / Input / RDS
 Menu	 Menu / Home
 [ + ] / Aspect	 Picture / Format
 N	 D.Menu / Top
 OO/Surround	 Eject / Surround
 i	 Info / Angle
 X/Exit	 Exit / Cancel / Clear
 Viera Tools	 Display / Media
 Internet	 Smart / List
 Up	 Up
 Guide	 Guide / EPG / -/-
 Left	 Left
 OK	 OK
 Right	 Right

Originale	Sostituto
 Option	 Setup / OPT /
 Down	 Down
 Return/Back	 Back / Return
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 [ = ] / Text	 Text / Goto
 [ = ♦ ] / STTL	 Subtitle / EQ
 [ = i ] / Index	 Sound / Title
 [ = + ] / Hold	 Shift + Stop /
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6



