


 

 

 

 

 

 

 




 
 

 
 













Originale	Sostituto
 Power	 Power
 Drive Select	 Smart
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 */Delete	 3D
 Input Select	 AV
 CH/Page Up	 Ch +
 CH/Page Down	 Ch -
 Prog/Check	 Sleep

Originale	Sostituto
 Chapter	 Pre Ch
 I<<	 I<<
 >>I	 >>I
 <<	 <<
 >>	 >>
 Stop	 Stop
 Pause/Pause Live	 Pause
 Play	 Play
 i/Status	 Info
 Exit	 Exit
 Option	 Options
 Return	 Back
 Direct Navigator	 List
 Function Menu	 Menu
 Guide	 Guide
 Up	 Up
 Down	 Down





Originale	Sostituto
Right/II>	Right
<II/Left	Left
OK	Ok
Red	Red
Green	Green
Yellow/Manual Skip -10s	Yellow
Blue/Manual Skip +60s	Blue
Rec	Rec
Rec Mode	Shift + Rec
Ext Link	Media
Direct Tv Rec	TV/R
Text	Text
[≡◆]/STTL	Subt
Display	Shift + Info
Time Slip	Format
Power Tv	Shift + Power
AV Tv	Shift + AV

Originale	Sostituto
Vol+ Tv	Vol +
Vol- Tv	Vol -
CH+ Tv	Shift + Ch +
CH- Tv	Shift + Ch -

