





 

 
 


 

 

 
 
 

 





 








 

 




Originale	Sostituto
 Power	 Power
 AV	 AV
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Still	 Format
 Recall	 Pre Ch
 Vol+	 Vol +
 Vol-	 Vol -
 Mute	 Mute

Originale	Sostituto
 i	 Info
 P+	 Ch +
 P-	 Ch -
 Menu	 Menu
 Exit	 Exit
 Option	 Options
 Back/Return	 Back
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 OK	 Ok
 TV	 TV/R
 Media	 Media
 Guide	 Guide
 [+]	 3D
 Timer	 Shift + AV



