




 

 



 



 

 

 

 

 


 
 
 






 
 

 

 








 
 
 




 


 


 
 

 





Originale	Sostituto
 Power	 Power
 Open/Close	 Eject
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Mirroring	 Guide
 Setting	 Shift + Options
 Netflix	 Media
 Home	 Smart
 Internet	 Shift + Smart

Originale	Sostituto
 Pop-Up Menu	 D. Menu
 Top Menu	 Menu
 Option	 Options
 Return	 Back
 Up	 Up
 Down	 Down
 Right/ >	 Right
 < /Left	 Left
 OK	 Ok
 Red	 Red
 Green	 Green
 Yellow	 Yellow
 Blue	 Blue
 <<	 <<
 Play	 Play
 >>	 >>
 <<	 <<





Originale	Sostituto
Pause	Pause
>>I	>>I
Stop	Stop
Manual Skip +60s	Shift + Right
Manual Skip -10s	Shift + Left
Status	TV/R
Playback Info	Info
Subtitle	Subt
Audio	Dual
Picture Setting	Format
HDR Setting	3D
Sound Effect	Shift + Dual
High Clarity	Text
DIM	List
Power Tv	Shift + Power
AV Input Tv	AV
Vol+ Tv	Vol +

Originale	Sostituto
Vol- Tv	Vol -
CH+ Tv	Ch +
CH- Tv	Ch -

