
 

 

 
 







 

 

 

 

 

 
 
 
 
 

 

 




 

 



 




Originale	Sostituto
 Power	 Power
 Viera Tools	 Smart
 Tv Input	 TV/R
 AV Input	 AV
 Menu	 Menu
 Text	 Text
 [≡◆]/STTL	 Subt
 Guide	 Guide
 i	 Info
 X/Exit	 Exit
 Option	 Options
 Back/Return	 Back
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 OK	 Ok

Originale	Sostituto
 Red	 Red
 Green	 Green
 Yellow	 Yellow
 Blue	 Blue
 Vol+	 Vol +
 Vol-	 Vol -
 Mute	 Mute
 [ + ]/Aspect	 3D
 CH+	 Ch +
 CH-	 Ch -
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7





Originale		Sostituto	
	8		8
	9		9
	0		0
	Still		Media
	Last View		Pre Ch

Originale		Sostituto	

