 

 

 

 

 

 

 

 



 

 



 









 



 


 
 
 


 

 

 

 

 

 

 

 

 

 

 





| Originale   | Sostituto  |
|---|--|
|  Power         |  Power                    |
|  SD/HC         |  Shift + Display / Media  |
|  Tv Input      |  Shift + AV / Input / RDS |
|  AV Input      |  AV / Input / RDS         |
|  Aspect        |  Picture / Format         |
|  Menu          |  Menu / Home              |
|  Cast Viera    |  Smart / List             |
|  Direct Tv Rec |  Shift + Rec / Rec Mode   |
|  i             |  Info / Angle             |
|  Exit          |  Exit / Cancel / Clear    |
|  Viera Tools  |  D.Menu / Top            |
|  Viera Link  |  Display / Media        |
|  Up          |  Up                     |
|  Guide       |  Guide / EPG / -/--     |
|  Left        |  Left                   |
|  OK          |  OK                     |
|  Right       |  Right                  |

| Originale   | Sostituto   |
|---|---|
|  Option      |  Setup / OPT /               |
|  Down        |  Down                        |
|  Back/Return |  Back / Return               |
|  Red         |  Red / Netflix / Search      |
|  Green       |  Green / APP / Repeat        |
|  Yellow      |  Yellow / YouTube / Repeat   |
|  Blue        |  Blue / Prime Video / Random |
|  Text        |  Text / Goto                 |
|  STTL        |  Subtitle / EQ               |
|  [≡i]/Index  |  Eject / Surround            |
|  Hold       |  Shift + Stop /             |
|  1         |  1                         |
|  2         |  2                         |
|  3         |  3                         |
|  4         |  4                         |
|  5         |  5                         |
|  6         |  6                         |





| Originale      | Sostituto         |
|----------------|-------------------|
| 7              | 7                 |
| 8              | 8                 |
| 9              | 9                 |
| Mute           | Mute / Dimmer     |
| 0              | 0                 |
| OIO            | Audio / Lang I/II |
| Vol+           | Vol+              |
| PR+            | CH+ / Page+       |
| Vol-           | Vol-              |
| PR-            | CH- / Page-       |
| Power Down TV  | Shift + Power     |
| Rec Tv         | Rec / Rec Mode    |
| Programme Down | Shift + CH- /     |
| Programme Up   | Shift + CH+ /     |
| << Tv          | << / Tune-        |
| << Tv          | I<< / Preset-     |
| Play Tv        | Play / Slow       |

| Originale     | Sostituto             |
|---------------|-----------------------|
| >> Tv         | >> / Tune+            |
| >> Tv         | >>I / Preset+         |
| Stop Tv       | Stop / Hold           |
| Pause/Step Tv | Pause / Step / Freeze |







| Originale              | Sostituto             |
|------------------------|-----------------------|
| Power Down             | Power                 |
| Rec DVD/VCR            | Rec / Rec Mode        |
| Programme Down DVD/VCR | CH- / Page-           |
| Programme Up DVD/VCR   | CH+ / Page+           |
| <<</I<<<               | I<< / Preset-         |
| >>>/I>>>               | <<< / Tune-           |
| Play DVD/VCR           | Play / Slow           |
| >>>/I>>>               | >>I / Preset+         |
| >>>/I>>>               | >> / Tune+            |
| Stop DVD/VCR           | Stop / Hold           |
| Pause/Step             | Pause / Step / Freeze |
|                        |                       |
|                        |                       |
|                        |                       |
|                        |                       |
|                        |                       |
|                        |                       |
|                        |                       |
|                        |                       |
|                        |                       |

| Originale | Sostituto |
|-----------|-----------|
|           |           |
|           |           |
|           |           |
|           |           |
|           |           |
|           |           |
|           |           |
|           |           |
|           |           |
|           |           |
|           |           |
|           |           |
|           |           |
|           |           |
|           |           |
|           |           |
|           |           |
|           |           |
|           |           |
|           |           |

