





 






 
 

 

 

 
 
 



 
 
 
 








Originale	Sostituto
 Power	 Power
 Picture	 Format
 Input Tv	 TV/R
 Input AV	 AV
 Menu	 Menu
 Text	 Text
 STTL	 Subt
 APPS	 Media
 i	 Info
 Exit	 Exit
 Netflix	 Shift + Media
 Home	 Smart
 Guide	 Guide
 Option	 Options
 Back/Return	 Back
 Up	 Up
 Down	 Down

Originale	Sostituto
 Right	 Right
 Left	 Left
 OK	 Ok
 Red	 Red
 Green	 Green
 Yellow	 Yellow
 Blue	 Blue
 Vol+	 Vol +
 Vol-	 Vol -
 Mute	 Mute
 P+	 Ch +
 P-	 Ch -
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5





	Originale	Sostituto		Sostituto
	6			6
	7			7
	8			8
	9			9
	0			0
	?/eHelp			3D
	Last View			Pre Ch
	<<			<<
	Play			Play
	>>			>>
	I<<			I<<
	Pause			Pause
	>>I			>>I
	Stop			Stop
	Rec			Rec
	My APP			Shift + Smart

	Originale	Sostituto

