



Originale		Sostituto		Originale		Sostituto	
	Power		Power		Display		Info
	Dimmer		Smart		Sound		Dual
	Open/Close CD		Pre Ch		Play Menu		Menu
	Bluetooth		Media		Album Up		Up
	USB/CD		AV		Album Down		Down
	Radio/AUX		TV/R		OK		Ok
	<<		<<				
	I<<		I<<				
	Play		Play				
	Pause		Pause				
	>>		>>				
	>>I		>>I				
	Stop		Stop				
	Vol+		Vol +				
	Vol-		Vol -				
	Mute		Mute				
	Setup		Options				

