







 



 























 

 

 



 

 



 

 

 

 

 

 

 



 





| Originale | Sostituto | Originale | Sostituto |
|---|----------------|---|-----------------------|
|  | Off/On |  | Power |
|  | Sleep |  | Sleep / Timer |
|  | Display |  | Display / Media |
|  | Tuner/Band |  | Shift + 6 |
|  | CD |  | Shift + 3 |
|  | Tape Length |  | Shift + 4 |
|  | Auto Edit |  | Text / Goto |
|  | FIT |  | Setup / OPT / |
|  | M.Edit |  | D.Menu / Top |
|  | ATLS |  | Menu / Home |
|  | 1 |  | 1 |
|  | 2 |  | 2 |
|  | 3 |  | 3 |
|  | 4 |  | 4 |
|  | 5 |  | 5 |
|  | 6 |  | 6 |
|  | 7 |  | 7 |
|  | 8 |  | 8 |
|  | 9 |  | 9 |
|  | 10 |  | Guide / EPG / -/- |
|  | +10 |  | 0 |
|  | Program |  | TV/Radio / |
|  | Cancel |  | Exit / Cancel / Clear |
|  | CD Random |  | OK |
|  | CD Repeat |  | Back / Return |
|  | Tape << TPS |  | << / Tune- |
|  | Tape TPS >> |  | >> / Tune+ |
|  | Tape Rec/Pause |  | Rec / Rec Mode |
|  | CD I<</<< |  | I<< / Preset- |
|  | CD >>/>>I |  | >>I / Preset+ |
|  | < Tape |  | Shift + << / |
|  | Tape > |  | Shift + >> / |
|  | Tape Stop |  | Stop / Hold |
|  | CD Pause |  | Pause / Step / Freeze |



