



Originale	Sostituto
Power	Power
Select Drive	Eject
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
Last View	Pre Ch
Radio/TV	TV/R
CH/Page+	Ch +
CH/Page-	Ch -
Internet	Smart

Originale	Sostituto
Skip >>I	>>I
I<< Skip	I<<
<< Slow Search	<<
Slow/Search >>	>>
Stop	Stop
Pause/Pause Live	Pause
Play	Play
i/Status	Info
X/Exit	Exit
Option	Options
Back/Return	Back
Direct Navigator	List
Guide	Guide
Function Menu	Menu
Up	Up
Down	Down
Right/I>	Right





Originale	Sostituto
< /Left	Left
OK	Ok
Red	Red
Green	Green
Yellow	Yellow
Blue	Blue
Rec	Rec
AD	+ Shift + Subt
Text	Text
STTL	Subt
Prog/Check	Sleep
Chapter	Format
Del	Dual
Time Slip	3D
Netflix	Media
Setup	D. Menu
Manual Skip -10s	+ Shift + <<

Originale	Sostituto
Manual Skip +60s	+ Shift + >>
Power Tv	+ Shift + Power
AV Input Tv	AV
Vol+ Tv	Vol +
Vol- Tv	Vol -
CH+ Tv	+ Shift + Ch +
CH- Tv	+ Shift + Ch -

