



Originale	Sostituto
	Power
	Shift + 1
	Shift + 6
	TV/Radio /
	Shift + 3
	Shift + 2
	I<< / Preset-
	Shift + Power
	>>I / Preset+
	AV / Input / RDS
	<< / Tune-
	>> / Tune+
	Stop / Hold
	Pause / Step / Freeze
	Play / Slow
	D.Menu / Top
	Up

Originale	Sostituto
	Menu / Home
	Left
	OK
	Right
	Smart / List
	Down
	Back / Return
	Info / Angle
	Shift + AV / Input / RDS
	Sleep / Timer
	Setup / OPT /
	Audio / Lang I/II
	Subtitle / EQ
	Picture / Format
	1
	2
	3





Originale	Sostituto
DISPLAY	Display / Media
4	4
5	5
6	6
A-B REPEAT	Yellow / YouTube / Repeat
7	7
8	8
9	9
REPEAT	Green / APP / Repeat
CANCEL	Exit / Cancel / Clear
0	0
≥10/-/-	Guide / EPG / -/-
POSITION MEMORY CENTER FOCUS	CH+ / Page+
POSITION MEMORY CENTER FOCUS	CH- / Page-
SUBWOOFER LEVEL 5 D.MIX	Shift + Eject / Surround
SUBWOOFER LEVEL 5 D.MIX	Blue / Prime Video / Random
DOPL CH SELECT	Sound / Title

Originale	Sostituto
DOPL CH SELECT	Red / Netflix / Search
SFC TEST	Zoom / Size
SFC TEST	Text / Goto
MUTING SUPER SURROUND	Mute / Dimmer
MUTING SUPER SURROUND	Eject / Surround
TV VO	Vol-
VOLUME	Vol+

