






 

 



 















 

 

 





Originale	Sostituto
 Power	 Power
 Input TV	 AV
 Input AV	 Shift + AV
 (<>)	 Shift + Dual
 Viera Link	 Dual
 Option	 Options
 Direct TV Rec	 TV/R
 Aspect	 Format
 Exit	 Exit
 Up	 Up
 Left	 Left
 OK	 Ok
 Right	 Right
 Down	 Down
 Menu	 Menu
 Return	 Back
 Red	 Red

Originale	Sostituto
 Green	 Green
 Yellow	 Yellow
 Blue	 Blue
 Text	 Text
 Index	 Shift + Info
 Hold	 Shift + Text
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0 / VCR	 0
 i	 Info



