



Originale	Sostituto
Power	Power
Sleep - Auto Off	Sleep
Clock/Timer	AV
Play/Rec	Rec
Program	Shift + Sleep
Repeat	Text
Play Mode	Shift + Play
Display / Dimmer	Info
Disc	D. Menu
1 / Disc 1	1
2 / Disc 2	2
3 / Disc 3	3
4 / Disc 4	4
5 / Disc 5	5
6	6
7	7
8	8

Originale	Sostituto
9	9
0	0
+10	Guide
Del	Exit
Edit Mode	3D
< Album	<<
Album >	>>
I<<	I<<
>>I	>>I
Play Tape	Pause
USB Play/Pause	Media
Play/Pause CD	Play
Stop/Clear	Stop
AUX	Red
Tuner/band	TV/R
Up	Up
Left / Vol-	Vol -



