
 
 
 
 
 
 
 
 

 

 
 

 
 
 
 
 



 










 




 
 
 
 
 

 

 
 


 
 

 
 

 









Originale	Sostituto
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Recall/Last View	 Pre Ch
 Radio/Tv	 TV/R
 CH/Page+	 Ch +
 CH/Page-	 Ch -
 Internet	 Smart
 Skype	 Media

Originale	Sostituto
 I<< Skip	 I<<
 Skip >>I	 >>I
 << Slow/Search	 <<
 Slow/Search >>	 >>
 Stop	 Stop
 Pause	 Pause
 Play	 Play
 i/Status	 Info
 X/Exit	 Exit
 Option	 Options
 Return	 Back
 Direct Navigator	 List
 Guide	 Guide
 Function Menu	 Menu
 Up	 Up
 Down	 Down
 Right	 Right





Originale	Sostituto
Left	Left
OK	Ok
Red	Red
Green	Green
Yellow	Yellow
Blue	Blue
Rec	Rec
	+
Rec Mode	Shift + Rec
Text	Text
STTL	Subt
Prog/Check	Sleep
Chapter	AV
Time Slip	Eject
Audio	Dual
Drive Select	D. Menu
	+
Del	Shift + Exit
Manual Skip -10s	Format

Originale	Sostituto
Manual Skip +60s	3D
	+
Power Tv	Shift + Power
	+
Av Input Tv	Shift + AV
Vol+ Tv	Vol +
Vol- Tv	Vol -
	+
CH+ Tv	Shift + Ch +
	+
CH- Tv	Shift + Ch -

