
























 
 







 






 




 
 


 
 



 



 



 

 

 









Originale		Sostituto		Originale		Sostituto	
	Power		Power		Timer Date+		Shift + Right
	OSD		Info		Timer Date-		Shift + Left
	I<< / Index-		I<<		Timer On+		Shift + Vol +
	>>I / Index+		>>I		Timer On-		Shift + Vol -
	Play		Play		Timer Off+		Shift + Ch +
	<< REW		<<		Timer Off-		Shift + Ch -
	FF >>		>>		Timer Check		Shift + Menu
	Stop		Stop		Timer Cancel		Shift + Exit
	Pause / Still		Pause		Timer Rec		Shift + Rec
	Slow		Shift + Play		Display		Shift + Info
	Rec		Rec		Reset		Back
	Tracking+ /		Ch +		Zero Stop		Shift + 0
	Tracking- /		Ch -		Audio Out		Dual
	Λ		Vol +		1		1
	V		Vol -		2		2
	Timer Λ		Shift + Up		3		3
	Timer V		Shift + Down		4		4





Originale		Sostituto		Originale		Sostituto	
	5		5		Store		Smart
	6		6		Input Select		AV
	7		7				
	8		8				
	9		9				
	0		0				
	Video Plus+		Pre Ch				
	-/--		Guide				
	Up		Up				
	Left		Left				
	Menu		Menu				
	Menu		Ok				
	Right		Right				
	Down		Down				
	Recording LP SP		Media				
	Exit		Exit				



