 










 


Originale	Sostituto
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 -/--	 Guide
 Cancel	 Exit
 AV	 AV
 Input Select	 Media
 Direct Tv Rec	 TV/R
 ShowView	 3D

Originale	Sostituto
 CH+	 Ch +
 CH-	 Ch -
 Vol+	 Vol +
 Vol-	 Vol -
 I<< Skip	 I<<
 Skip >>I	 >>I
 << Slow/Search	 <<
 Slow/Search >>	 >>
 Pause	 Pause
 Stop	 Stop
 Play	 Play
 Menu/Play List	 Menu
 Top Menu / Direct Navigator	 D. Menu
 Functions	 Options
 Return	 Back
 Up	 Up
 Down	 Down





Originale	Sostituto
 Right	 Right
 Left	 Left
 Enter	 Ok
 Rec	 Rec
 Frame II>	 Shift + Right
 <II Frame	 Shift + Left
 Manual Skip	 Format
 Erase	 Text
 Prog/Check	 Sleep
 Time Slip	 Smart
 Timer	 Shift + AV
 Marker	 Pre Ch
 Status	 List
 Rec Mode	 Shift + Rec
 F.Rec	 Subt
 A/Display	 Red
 A/Display	 Info

Originale	Sostituto
 B/Position	 Green
 C/Audio	 Yellow
 C/Audio	 Dual
 D/AV Link	 Blue





Originale	Sostituto
Power	Power
CH+	Ch +
CH-	Ch -
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
-/--	Guide
A	Red
B	Green
C	Yellow

Originale	Sostituto
D	Blue

