 
 

 



 


 
 
 
 




 


 






 
 





 


 
 
 








| Originale | Sostituto |
|---|---|
|  Power |  Power |
|  Sleep |  Sleep |
|  AUX |  AV |
|  TUNER / BAND |  Smart |
|  Preset Down |  Ch - |
|  Preset Up |  Ch + |
|  CD Program |  Shift + Sleep |
|  CD Cancel |  Exit |
|  CD Repeat |  Text |
|  CD I<< |  I<< |
|  CD >>I |  >>I |
|  CD Play |  Play |
|  CD Pause |  Pause |
|  CD Stop / CD |  Stop |
|  TAPE Deck 1/2 |  Ok |
|  TAPE << |  << |
|  TAPE >> |  >> |

| Originale | Sostituto |
|--|---|
|  TAPE Play Rev. |  Left |
|  TAPE Play |  Right |
|  TAPE Stop |  Down |
|  TAPE Rec Pause |  Rec |
|  EQ SPACE On/Flat |  Menu |
|  EQ SPACE Mode |  Info |
|  Muting -20 dB |  Mute |
|  Volume- |  Vol - |
|  Volume+ |  Vol + |

