
 
 

 
 



 
 
 


 

 


 

 
 
 

 
 
 






 
 
 
 



 
 
 

 









Originale	Sostituto
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Cancel	 D. Menu
 Audio	 Dual
 Vol +	 Vol +
 Vol -	 Vol -
 Mute	 Mute
 Disc/SD	 AV

Originale	Sostituto
 iPod/Radio/Ext-In	 TV/R
 PIP	 3D
 << Search/Slow	 <<
 Play	 Play
 Search/Slow >>	 >>
 I<< Skip/↓	 I<<
 Pause	 Pause
 Skip >>I↑	 >>I
 Stop	 Stop
 Status	 List
 Exit	 Exit
 Viera Cast	 Media
 Home	 Smart
 Pop-Up Menu/Top Menu	 Menu
 Option	 Options
 Up	 Up
 Return	 Back



