

 
 
 

 

 
 
 

 

 


 
 

 
 
 

 
 
 
 

 
 

 



 

 
 
 


 

 
 
 
 




Originale	Sostituto
 Power	 Power
 Tv/Text	 Text
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 AV/Input Select	 AV
 -/--	 Guide
 Tracking/V-Lock+	 Ch +
 Tracking/V-Lock-	 Ch -
 Vol+	 Vol +

Originale	Sostituto
 Vol-	 Vol -
 Search	 Shift + TV/R
 Show View	 Smart
 OSD/Display	 Info
 Replay	 Pre Ch
 Direct Tv Rec	 TV/R
 I<< Index	 I<<
 Index >>I	 >>I
 Rec	 Rec
 Pause/Step	 Pause
 Menu	 Menu
 OK	 Ok
 Play/Up	 Play
 Stop/Down	 Stop
 >>/Right	 >>
 <</Left	 <<
 SP/LP	 Format



