

 




















Originale	Sostituto
 Power	 Power
 Muting	 Mute / Dimmer
 Play DVD/CD	 Play / Slow
 Pause/Disc Pause	 Pause / Step / Freeze
 Stop	 Stop / Hold
 Rec	 Rec / Rec Mode
 << Slow/Search	 << / Tune-
 Slow/Search >>	 >> / Tune+
 I<</Rew	 I<< / Preset-
 >>/FF	 >>/ Preset+
 Sound	 Sound / Title
 M. Re-master	 Audio / Lang I/II
 Subwoofer	 Subtitle / EQ
 Surround	 Eject / Surround
 Group	 Picture / Format
 A.Only	 Zoom / Size
 Sleep	 Sleep / Timer

Originale	Sostituto
 All Disc	 TV/Radio /
 Top Menu/Direct Navigator	 D.Menu / Top
 Setup	 Setup / OPT /
 Q Replay	 Text / Goto
 Tv/AV	 AV / Input / RDS
 Menu/Play List	 Menu / Home
 Up	 Up
 P.Memory	 Info / Angle
 Left	 Left
 Enter	 OK
 Right	 Right
 Cancel	 Exit / Cancel / Clear
 Down	 Down
 Return	 Back / Return
 Vol+	 Vol+
 Auto Off	 Smart / List
 Tv CH+	 CH+ / Page+





Originale	Sostituto
Vol-	Vol-
Display	Display / Media
Tv CH-	CH- / Page-
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
≥10	Guide / EPG / -/-
0	0
PGM	Fav / Marker / PC
Angle/Page	Red / Netflix / Search
Repeat	Green / APP / Repeat

Originale	Sostituto
Disc	Blue / Prime Video / Random
Tv Power	Shift + Power
Dimmer	Shift + Mute / Dimmer
<> Tape	Shift + Pause / Step /
Play Mode	Yellow / YouTube / Repeat
Play/Rec	Shift + Rec / Rec Mode
Clock/Timer	Shift + Sleep / Timer
Tv Vol+	Shift + Vol+
Tv Vol-	Shift + Vol-
FL Display	Shift + Display / Media
Tuner/AUX	Shift + 6

