 


Originale	Sostituto	Originale	Sostituto
Picture Mode	Picture / Format	CH+ / Tracking/V-Lock+	CH+ / Page+
DVD Status	Info / Angle	Cancel / Reset	Exit / Cancel / Clear
Dubbing	Yellow / YouTube / Repeat	-/-- / >=10	Guide / EPG / -/--
VHS/DVD	Smart / List	Play	Play / Slow
Quick Replay	Red / Netflix / Search	Up	Up
Group	Zoom / Size	Left	Left
P.Memory	Fav / Marker / PC	Enter	OK
Return	Back / Return	Right	Right
AV Enhancer	AV / Input / RDS	Down	Down
Direct Navigator / Top Menu	D.Menu / Top	Display	Display / Media
Play List / Menu	Menu / Home	Setup	Setup / OPT /
Play Mode	Shift + Play /	Timer	Sleep / Timer
REW / << Slow/Search	<< / Tune-	0	0
FF / Slow/Search	>> / Tune+	Audio	Audio / Lang I/II
VHS/DVD Power	Power	1	1
Pause / Slow	Pause / Step / Freeze	2	2
CH- / Tracking/V-Lock-	CH- / Page-	3	3

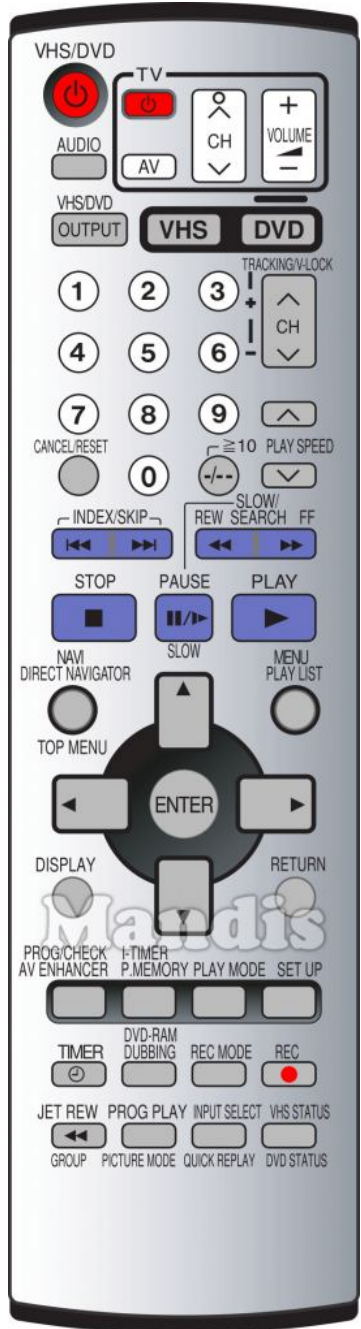




	Originale	Sostituto		Originale	Sostituto
		4		4	
		5		5	
		6		6	
		7		7	
		8		8	
		9		9	
		I<< Skip		I<< / Preset-	
		Skip >>I		>>I / Preset+	
		Stop		Stop / Hold	

	Originale	Sostituto



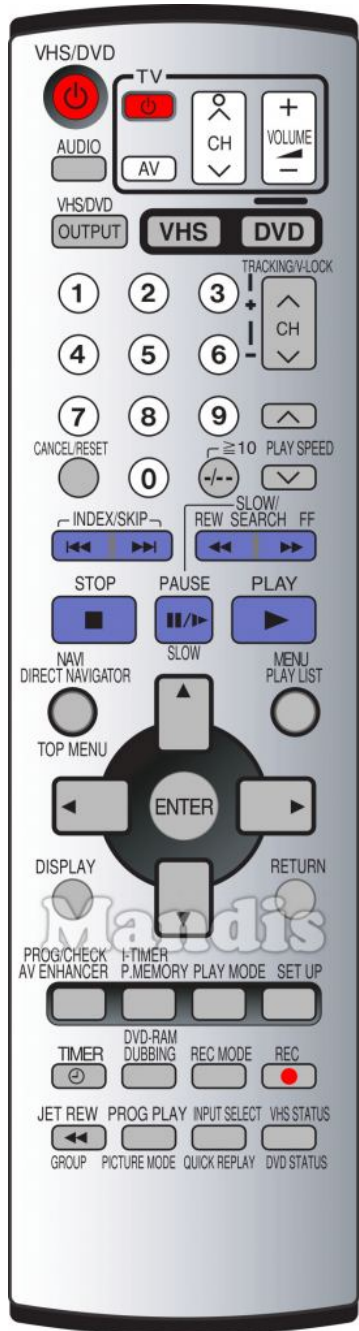

Originale	Sostituto
Prog Play	Shift + Play /
I-Timer	Shift + Sleep / Timer
Cancel / Reset	Exit / Cancel / Clear
VHS/DVD	Smart / List
Display	Display / Media
VCR Status	Info / Angle
Dubbing	Yellow / YouTube / Repeat
Jet Rew	Shift + << /
Pause / Slow	Pause / Step / Freeze
CH+ / Tracking/V-Lock+	CH+ / Page+
CH- / Tracking/V-Lock-	CH- / Page-
VHS/DVD Power	Power
-/-- / >=10	Guide / EPG / -/--
Return	Back / Return
Prog/Check	TV/Radio /
I<< Index	I<< / Preset-
Index >>I	>>I / Preset+

Originale	Sostituto
FF	>> / Tune+
Play	Play / Slow
Menu	Menu / Home
Up	Up
Left	Left
Enter	OK
Right	Right
Down	Down
Stop	Stop / Hold
Rec Mode	Shift + Rec / Rec Mode
Timer	Sleep / Timer
Rec	Rec / Rec Mode
0	0
Audio	Audio / Lang I/II
1	1
2	2
3	3



