



 


 
 

 

 

 


 

 

 

 

 

 
 

 





 



 

 

 

 



 







Originale	Sostituto	Originale	Sostituto
 Power	 Power	 Vol+	 Vol+
 Sleep	 Sleep / Timer	 Vol-	 Vol-
 PlayTimer	 Pause / Step / Freeze	 Mute	 Mute / Dimmer
 Clock/Timer	 Shift + Sleep / Timer	 Bluetooth	 Shift + 9
 1	 1	 CD/USB	 Red / Netflix / Search
 2	 2	 Radio/Ext-In	 Green / APP / Repeat
 3	 3	 I<<	 I<< / Preset-
 4	 4	 Play/Pause	 Play / Slow
 5	 5	 >>I	 >>I / Preset+
 6	 6	 <<	 << / Tune-
 7	 7	 Stop	 Stop / Hold
 8	 8	 >>	 >> / Tune+
 9	 9	 OK	 OK
 0	 0	 D.Bass	 Text / Goto
 DEL	 Exit / Cancel / Clear	 Sound	 Sound / Title
 +10	 Guide / EPG / -/-	 Preset EQ	 AV / Input / RDS
 Program	 TV/Radio /	 Display	 Display / Media

Originale	Sostituto	Originale	Sostituto
 Power	 Power	 TV	 TV
 SLEEP	 SLEEP	 DVD	 DVD
 PLAY	 PLAY	 SAT	 SAT
 CLOCK/TIMER	 CLOCK/TIMER	 AUX	 AUX
 1	 1	 SLOW	 SLOW
 2	 2	 STEP-FREEZE	 STEP-FREEZE
 3	 3	 HOLD	 HOLD
 4	 4	 REC MODE	 REC MODE
 5	 5	 TUNE-	TUNE-
 6	 6	 TUNE+	TUNE+
 7	 7	 PRESET-	 PRESET-
 8	 8	 PRESET+	 PRESET+
 9	 9	TITLE	TITLE
0	0	SOUND	SOUND
DEL	DEL	RDS	RDS
≥10	≥10	AV INPUT	AV INPUT
PROGRAM	PROGRAM	MEDIA	MEDIA



Program

