 

 





 

 





 

 

 

 

 



 

 



 
 

 

 




 
 





Originale	Sostituto
 Power	 Power
 Sleep	 Sleep / Timer
 O/Play	 Subtitle / EQ
 Play	 Play / Slow
 Clock/Timer	 Shift + Sleep / Timer
 Program	 TV/Radio /
 Vol+	 Vol+
 Vol-	 Vol-
 Mute	 Mute / Dimmer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8

Originale	Sostituto
 9	 9
 0	 0
 Del	 Exit / Cancel / Clear
 +10	 Guide / EPG / -/--
 iPod	 Red / Netflix / Search
 CD	 Shift + 3
 Radio/Ext In	 Green / APP / Repeat
 I<<	 I<< / Preset-
 Pause	 Pause / Step / Freeze
 >>I	 >>I / Preset+
 <<	 << / Tune-
 Stop	 Stop / Hold
 >>	 >> / Tune+
 Sound	 Sound / Title
 D.Bass	 D.Menu / Top
 Preset EQ	 Setup / OPT /
 Display/Dimmer	 Info / Angle



