 




 









 






























 

 









Originale	Sostituto
 Standby AV	 Power
 Info	 Info / Angle
 Direct Navigator	 Smart / List
 Menu	 Menu / Home
 EPG	 Guide / EPG / -/--
 Exit	 Exit / Cancel / Clear
 Edit	 Fav / Marker / PC
 <<	 << / Tune-
 >>	 >> / Tune+
 Delete	 Back / Return
 Prog/Check	 Setup / OPT /
 Up	 Up
 Down	 Down
 Left	 Left
 Right	 Right
 OK	 OK
 Red	 Red / Netflix / Search

Originale	Sostituto
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 Stop	 Stop / Hold
 Pause	 Pause / Step / Freeze
 Play	 Play / Slow
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Live	 Display / Media





Originale		Sostituto	
	Tv/Radio		TV/Radio /
	Rec		Rec / Rec Mode
	Rec Pause	+	Shift + Pause / Step /
	Viewer		Zoom / Size
	Skip		AV / Input / RDS
	Set Book Mark		Subtitle / EQ
	Go Book Mark	+	Shift + TV/Radio / Program
	Vol+		Vol+
	Vol-		Vol-
	Timer Rec		Sleep / Timer
	Replay		>>I / Preset+
	Audio		Audio / Lang I/II
	Aspect		Picture / Format

Originale		Sostituto	









 



 

 


 
 

 

 









 





 

 

Originale	Sostituto
	Shift + Power
	Shift + AV / Input / RDS
	CH+ / Page+
	CH- / Page-
	Shift + Vol+
	Shift + Vol-
	Power
	Info / Angle
	Smart / List
	Menu / Home
	Guide / EPG / -/--
	Exit / Cancel / Clear
	Fav / Marker / PC
	<< / Tune-
	>> / Tune+
	Back / Return
	Setup / OPT /

Originale	Sostituto
	Up
	Down
	Left
	Right
	OK
	Red / Netflix / Search
	Green / APP / Repeat
	Yellow / YouTube / Repeat
	Blue / Prime Video / Random
	Stop / Hold
	Pause / Step / Freeze
	Play / Slow
	1
	2
	3
	4
	5





	Originale	Sostituto		Sostituto
	6		6	6
	7		7	7
	8		8	8
	9		9	9
	0		0	0
	Live		Display / Media	
	Tv/Radio		TV/Radio /	
	Rec		Rec / Rec Mode	
	Rec Pause		Shift + Pause / Step /	
	Viewer		Zoom / Size	
	Skip		AV / Input / RDS	
	Set Book Mark		Subtitle / EQ	
	Go Book Mark		Shift + TV/Radio / Program	
	Vol+		Vol+	
	Vol-		Vol-	
	Timer Rec		Sleep / Timer	
	Replay		I<< / Preset-	

	Originale	Sostituto		Sostituto
	Audio		Audio / Lang I/II	
	Aspect		Picture / Format	

