



Originale	Sostituto
	Power
	Menu / Home
	Picture / Format
	TV/Radio /
	AV / Input / RDS
	Red / Netflix / Search
	Green / APP / Repeat
	Yellow / YouTube / Repeat
	Blue / Prime Video / Random
	Info / Angle
	Exit / Cancel / Clear
	Setup / OPT /
	Back / Return
	Up
	Down
	Left
	Right

Originale	Sostituto
	OK
	Shift + Red / Netflix /
	Shift + Menu /
	Guide / EPG / -/-
	Mute / Dimmer
	Text / Goto
	Subtitle / EQ
	Shift + Smart / List
	Vol+
	Vol-
	CH+ / Page+
	CH- / Page-
	1
	2
	3
	4
	5





Originale		Sostituto	
	6		6
	7		7
	8		8
	9		9
	0		0
	?/eHelp		Shift + Info / Angle
	Recall		Shift + Back / Return
	<<		<< / Tune-
	Play		Play / Slow
	>>		>> / Tune+
	l<<		l<< / Preset-
	Pause		Pause / Step / Freeze
	>>l		>>l / Preset+
	My App		Smart / List
	Stop		Stop / Hold
	Rec		Rec / Rec Mode

Originale		Sostituto	

