



Originale		Sostituto		Originale		Sostituto	
	Power		Power		8		8
	Power Tv		Shift + Power		9		9
	Vol+ Tv		Vol+		ShowView		Picture / Format
	CH+ Tv		Shift + CH+ /		Delete/*		Zoom / Size
	Select Drive		Smart / List		0		0
	AV Tv		Shift + AV / Input / RDS		Input Select		AV / Input / RDS
	Vol- Tv		Vol-		Prog/Check		TV/Radio /
	CH- Tv		Shift + CH- /		I<< Skip		I<< / Preset-
	1		1		Skip >>I		>>I / Preset+
	2		2		<< Slow/Search		<< / Tune-
	3		3		Slow/Search >>		>> / Tune+
	CH/Page Up		CH+ / Page+		Stop		Stop / Hold
	4		4		Pause		Pause / Step / Freeze
	5		5		Play/x1.3		Play / Slow
	6		6		i/Status		Info / Angle
	CH/Page Down		CH- / Page-		Guide		Guide / EPG / -/-
	7		7		Exit		Exit / Cancel / Clear





Originale		Sostituto		Originale		Sostituto	
	Direct Navigator		D.Menu / Top		Audio		Audio / Lang I/II
	Left/<II		Left		STTL		Subtitle / EQ
	Up		Up		Display		Display / Media
	OK		OK		Time Slip		Sleep / Timer
	Right/ II>		Right				
	Function Menu		Menu / Home				
	Option		Setup / OPT /				
	Down		Down				
	Return		Back / Return				
	Red		Red / Netflix / Search				
	Green		Green / APP / Repeat				
	Yellow/Create Chapter		Yellow / YouTube / Repeat				
	Blue/Manual Skip		Blue / Prime Video / Random				
	Rec		Rec / Rec Mode				
	Rec Mode		Shift + Rec / Rec Mode				
	EXT Link		Eject / Surround				
	Direct Tv Rec		Text / Goto				

