





















 







 





Originale	Sostituto
Power	Power
Direct Tv Rec	TV/Radio /
Tv Aspect	Zoom / Size
Tv/Text	Text / Goto
1	1
2	2
Tracking/V-Lock+	CH+ / Page+
3	3
4	4
5	5
6	6
Tracking/V-Lock-	CH- / Page-
7	7
8	8
9	9
Volume+	Vol+
AV/Input Select	AV / Input / RDS

Originale	Sostituto
0	0
-/..	Shift + Guide / EPG / -/..
Volume-	Vol-
Search	Red / Netflix / Search
I<< Index	I<< / Preset-
Index >>I	>>I / Preset+
SV/V+	Picture / Format
Still Album	Setup / OPT /
Replay	Display / Media
Pause/Step	Pause / Step / Freeze
Rec	Rec / Rec Mode
Menu	Menu / Home
Play	Play / Slow
Up	Up
Exit	Exit / Cancel / Clear
<<	<< / Tune-
Left	Left





Originale	Sostituto
	 OK
	 Right
	 >> / Tune+
	 Down
	 Stop / Hold
	 Shift + CH+ /
	 Shift + 2
	 Shift + 3
	 Shift + 7
	 Shift + CH- /
	 Shift + 5
	 Shift + 6
	 Guide / EPG / -/--
	 Back / Return
	 Shift + Exit / Cancel / Clear
	 Subtitle / EQ
	 Sleep / Timer

Originale	Sostituto
	 Shift + 4
	 Audio / Lang I/II
	 Info / Angle
	 Smart / List





Originale	Sostituto
Power	Power
Direct Tv Rec	TV/Radio /
Tv Aspect	Zoom / Size
Tv/Text	Text / Goto
1	1
2	2
Tracking/V-Lock+	CH+ / Page+
3	3
4	4
5	5
6	6
Tracking/V-Lock-	CH- / Page-
7	7
8	8
9	9
Volume+	Vol+
AV/Input Select	AV / Input / RDS

Originale	Sostituto
0	0
-/--	Shift + Guide / EPG / -/--
Volume-	Vol-
Search	Red / Netflix / Search
I<< Index	I<< / Preset-
Index >>I	>>I / Preset+
SV/V+	Picture / Format
Still Album	Setup / OPT /
Replay	Display / Media
Pause/Step	Pause / Step / Freeze
Rec	Rec / Rec Mode
Menu	Menu / Home
Play	Play / Slow
Exit	Exit / Cancel / Clear
Up	Up
Left	<< / Tune-
Left	Left





Originale	Sostituto
	OK
	Right
	>> / Tune+
	Down
	Stop / Hold
	+ Shift + CH+ /
	+ Shift + 2
	+ Shift + 3
	+ Shift + 7
	+ Shift + CH- /
	+ Shift + 5
	+ Shift + 6
	Guide / EPG / -/--
	Back / Return
	+ Shift + Exit / Cancel / Clear
	Subtitle / EQ
	Sleep / Timer

Originale	Sostituto
	+ Shift + 4
	Audio / Lang I/II
	Info / Angle
	Smart / List





Originale	Sostituto
	Power
	TV/Radio /
	Picture / Format
	Text / Goto
	AV / Input / RDS
	Vol+
	CH+ / Page+
	Vol-
	CH- / Page-
	1
	2
	3
	4
	5
	6
	7
	8

Originale	Sostituto
	9
	Guide / EPG / -/-
	0
	Red / Netflix / Search
	Green / APP / Repeat
	Yellow / YouTube / Repeat
	Blue / Prime Video / Random

