



Originale		Sostituto		Originale		Sostituto	
	Power		Power		CH-		CH- / Page-
	TV Power		Shift + Power		7		7
	TV Vol+		Shift + Vol+		8		8
	TV Vol+		Vol+		9		9
	TV CH+		Shift + CH+ /		ShowView		Picture / Format
	Drive Select		Text / Goto		*/Delete		Shift + Exit / Cancel / Clear
	TV AV		Shift + AV / Input / RDS		0		0
	TV Vol-		Shift + Vol-		Input Select		AV / Input / RDS
	TV Vol-		Vol-		Status		Info / Angle
	TV CH-		Shift + CH- /		I<< Skip		I<< / Preset-
	1		1		Skip >>I		>>I / Preset+
	2		2		<<		<< / Tune-
	3		3		>>		>> / Tune+
	CH+		CH+ / Page+		Stop		Stop / Hold
	4		4		Pause		Pause / Step / Freeze
	5		5		Play / 1.3		Play / Slow
	6		6		Time Slip		Sleep / Timer





Originale	Sostituto
Prog / Check	TV/Radio /
Exit	Exit / Cancel / Clear
Direct Navigator	Smart / List
Left / < l	Left
Up	Up
Right / >	Right
Function Menu	Menu / Home
OK	OK
Option	Setup / OPT /
Down	Down
Return	Back / Return
Red / Audio	Audio / Lang I/II
Red / Audio	Red / Netflix / Search
Green / Display	Display / Media
Green / Display	Green / APP / Repeat
Yellow / Create Chapter	Yellow / YouTube / Repeat
Blue/ Manual Skip	Blue / Prime Video / Random

Originale	Sostituto
Rec	Rec / Rec Mode
Rec Mode	Shift + Rec / Rec Mode
Ext Link	D.Menu / Top
Direct Tv Rec	Eject / Surround

