







































Originale	Sostituto
 Power	 Power
 Auto Setup	 Setup / OPT /
 Computer 1	 Fav / Marker / PC
 Computer 1	 Red / Netflix / Search
 Computer 1	 1
 Computer 2	 2
 Computer 2	 Green / APP / Repeat
 HDMI	 0
 HDMI	 Blue / Prime Video / Random
 Video	 4
 Video	 Yellow / YouTube / Repeat
 Memory Viewer/USB	 Display / Media
 Memory Viewer/USB	 8
 Up	 Up
 Left	 Left
 Enter	 OK
 Right	 Right

Originale	Sostituto
 Down	 Down
 Menu	 Menu / Home
 Aspect	 Zoom / Size
 Keystone	 Text / Goto
 Info	 Info / Angle
 Freeze	 Pause / Step / Freeze
 AV Mute	 Shift + Mute / Dimmer
 P.Timer	 Sleep / Timer
 Lamp	 Smart / List
 D.Zoom+	 CH+ / Page+
 Vol+	 Vol+
 Image	 Picture / Format
 Daylight View	 D.Menu / Top
 D.Zoom-	 CH- / Page-
 Vol-	 Vol-
 Mute	 Mute / Dimmer

