



Originale	Sostituto
Power	Power
DVD	Shift + 2
FM/AM	Shift + 6
Display	Display / Media
Open/Close	Eject / Surround
Input Select	AV / Input / RDS
1	1
2	2
3	3
CH+	CH+ / Page+
4	4
5	5
6	6
CH-	CH- / Page-
7	7
8	8
9	9

Originale	Sostituto
Volume+	Vol+
Cancel	Exit / Cancel / Clear
0	0
-/--	Guide / EPG / -/--
Volume-	Vol-
I<< Skip	I<< / Preset-
Skip >>I	>>I / Preset+
<< Slow/Search	<< / Tune-
Slow/Search >>	>> / Tune+
Stop	Stop / Hold
Pause	Pause / Step / Freeze
Play / x1.3	Play / Slow
Top Menu / Direct Navigator	D.Menu / Top
Up	Up
Menu / Play List	Menu / Home
Left	Left
Enter	OK





Originale	Sostituto
	Right
	Smart / List
	Down
	Back / Return
	Yellow / YouTube / Repeat
	+  Shift + 1
	+  Shift + Left
	+  Shift + Right
	Green / APP / Repeat
	+  Shift + Text /
	Sound / Title
	Sleep / Timer
	TV/Radio /
	+  Shift + Exit / Cancel / Clear
	Rec / Rec Mode
	Info / Angle
	Text / Goto

Originale	Sostituto
	Fav / Marker / PC
	Zoom / Size
	+  Shift + Rec / Rec Mode
	Red / Netflix / Search
	Subtitle / EQ
	Picture / Format
	Audio / Lang I/II
	Mute / Dimmer
	Setup / OPT /







Originale	Sostituto
Power	Power
Power AV	+  Shift + Power
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
$\geq 10$ / -/--	Guide / EPG / -/--
Tv/AV	AV / Input / RDS
CH+	CH+ / Page+
CH-	CH- / Page-
Tv Vol+	Vol+

Originale	Sostituto
Tv Vol-	Vol-

