



Originale	Sostituto
Power	Power
Power TV	Shift + Power
Vol + TV	Vol+
CH + TV	Shift + CH+ /
Select Drive	Smart / List
AV TV	Shift + AV / Input / RDS
CH - TV	Shift + CH- /
Vol - TV	Vol-
1	1
2	2
3	3
CH / Page +	CH+ / Page+
4	4
5	5
6	6
CH / Page -	CH- / Page-
7	7

Originale	Sostituto
8	8
9	9
ShowView	Picture / Format
*	Fav / Marker / PC
0	0
Input Select	AV / Input / RDS
Delete	Exit / Cancel / Clear
I<< Skip	I<< / Preset-
Skip >>I	>>I / Preset+
<< Slow / Search	<< / Tune-
Slow / Search >>	>> / Tune+
Stop	Stop / Hold
Pause	Pause / Step / Freeze
Play / x1.3	Play / Slow
i	Info / Angle
Prog / Check	TV/Radio /
Guide	Guide / EPG / -/-





Originale	Sostituto
Direct Navigator	D.Menu / Top
<II / Left	Left
Up	Up
Enter	OK
Right / II>	Right
Functions	Setup / OPT /
S / Sub Menu	Menu / Home
Down	Down
Return	Back / Return
Red	Red / Netflix / Search
Green	Green / APP / Repeat
Yellow / Create Chapter	Yellow / YouTube / Repeat
Blue / Manual	Blue / Prime Video / Random
Rec	Rec / Rec Mode
Rec Mode	Shift + Rec / Rec Mode
Ext Link	Text / Goto
Direct Tv Rec	Eject / Surround

Originale	Sostituto
Audio	Audio / Lang I/II
Status	Zoom / Size
Display	Display / Media
Time Slip	Sleep / Timer

