



Originale	Sostituto
DVD/VHS Power	Power
TV Power	Shift + Power
TV CH +	Shift + CH+ /
TV Volume +	Vol+
Drive Select	Picture / Format
TV AV	Shift + AV / Input / RDS
TV CH -	Shift + CH- /
TV Volume -	Vol-
1	1
2	2
3	3
CH + / Tracking/V-Lock +	CH+ / Page+
4	4
5	5
6	6
CH - / Tracking/V-Lock -	CH- / Page-
7	7

Originale	Sostituto
8	8
9	9
VIDEO Plus+	TV/Radio /
* / Reset	Fav / Marker / PC
0	0
Input Select	AV / Input / RDS
Delete	Exit / Cancel / Clear
I<<	I<< / Preset-
>>I	>>I / Preset+
<<	<< / Tune-
>>	>> / Tune+
Stop	Stop / Hold
Pause	Pause / Step / Freeze
Play	Play / Slow
i	Info / Angle
Prog Check	Setup / OPT /
Guide	Guide / EPG / -/-





Originale	Sostituto
Direct Navigator	D.Menu / Top
Left / <ll	Left
Up	Up
Enter / OK	OK
Right / ll>	Right
Functions	Menu / Home
Sub Menu	Smart / List
Down	Down
Return	Back / Return
Red	Red / Netflix / Search
Green	Green / APP / Repeat
Yellow / Create Chapter	Yellow / YouTube / Repeat
Blue / Manual	Blue / Prime Video / Random
Rec	Rec / Rec Mode
Rec Mode	Shift + Rec / Rec Mode
Ext Link	Sound / Title
Direct TV Rec	Zoom / Size

Originale	Sostituto
Text	Text / Goto
STTL	Subtitle / EQ
Display	Display / Media
Time Slip / << Jet Rew	Shift + << /

