



Originale		Sostituto		Originale		Sostituto	
	Power		Power		8		8
	Power Tv		Shift + Power		9		9
	Vol+ Tv		Vol+		FPlay		Shift + Green / APP /
	CH+ Tv		Shift + CH+ /		Last View		Fav / Marker / PC
	Drive Select		Smart / List		0		0
	Input AV Tv		Shift + AV / Input / RDS		NET		Display / Media
	Vol- Tv		Vol-		Netflix		Shift + Red / Netflix /
	CH- Tv		Shift + CH- /		I<< Skip		I<< / Preset-
	1		1		Skip >>I		>>I / Preset+
	2		2		<< Slow/Search		<< / Tune-
	3		3		Slow/Search >>		>> / Tune+
	Page/CH+		CH+ / Page+		Stop		Stop / Hold
	4		4		Pause		Pause / Step / Freeze
	5		5		Play		Play / Slow
	6		6		i/Status		Info / Angle
	Page/CH-		CH- / Page-		Exit		Exit / Cancel / Clear
	7		7		Guide		Guide / EPG / -/-



